

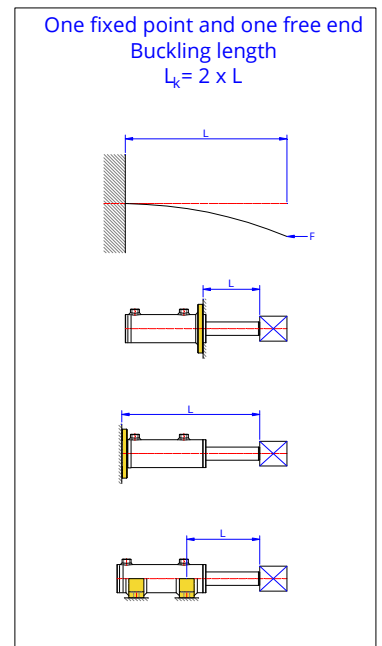
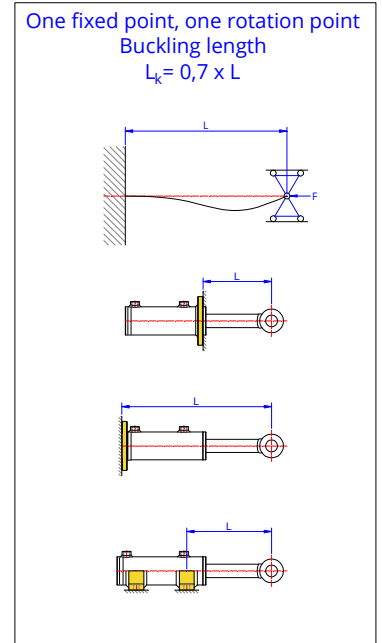
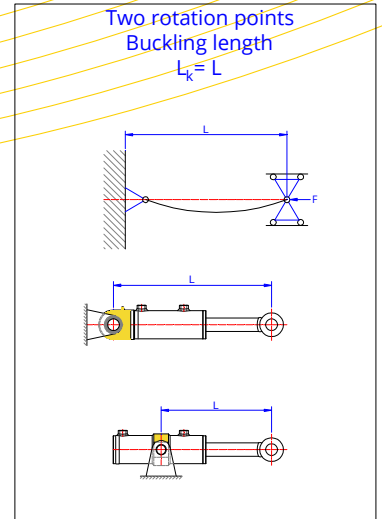


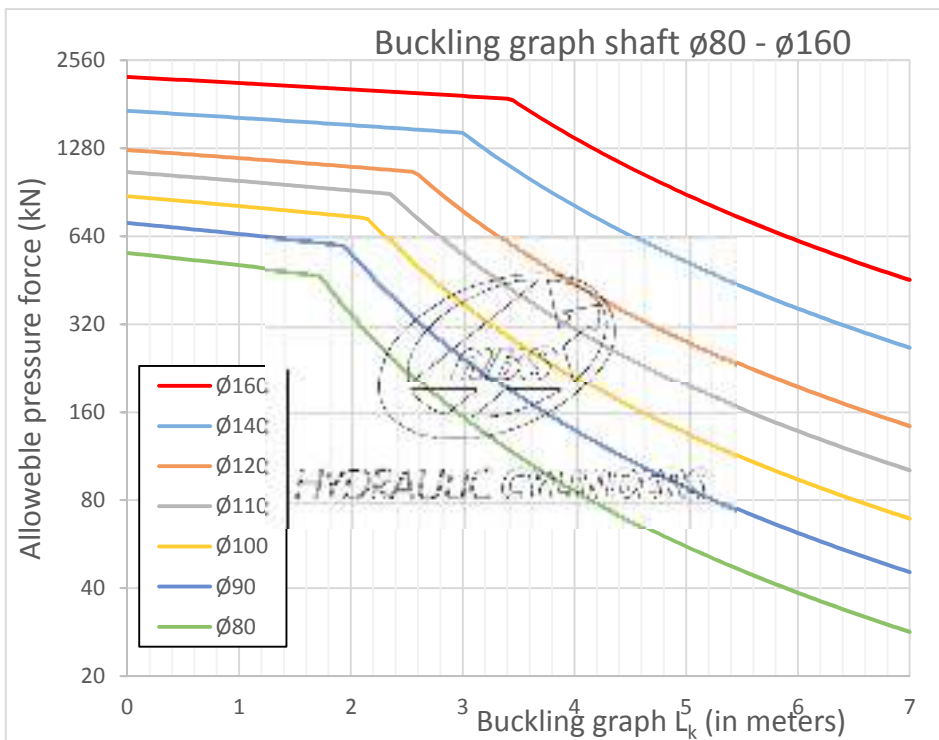

HYDRAULIC CYLINDERS

Bending diagram and power table

Below the maximum buckling load on the piston rod of the cylinder. These may not be exceeded by the construction or by the Hydraulic pushing forces. In the figures on the right you will see how the knuckle length to be determined.

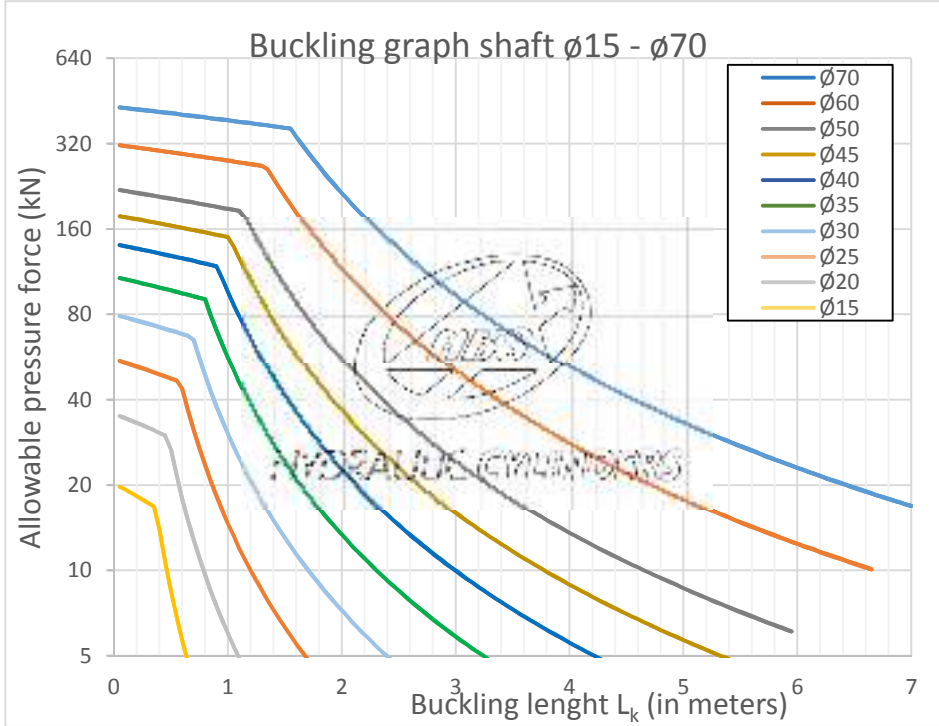



HYDRAULIC CYLINDERS

Contact / visiting address

ABS Cilinders BV

Visiting address: De Zwaikom 3
9641 KV Veendam
The Netherlands

Mailing address: PO Box 6
9640 AA Veendam
The Netherlands

Phone number: +31 598-622544
Fax number: +31 598-620875
Email: info@abshydro.com

WWW.ABSHYDRO.COM



Disclaimer: Despite the fact that ABS cylinders have compiled this information with extreme care, these tables, charts, and other shown information provided on the website no rights can be derived from the information. ABS Cylinder disclaims any liability as to the accuracy, completeness, actuality of the information provided.